


2.4.2 - WaterStop

Although this WaterStop device is made available, certified tests show that it is not necessary. SuperTie performs equally well with or without WaterStop. See "Summary of Certified Tests" in Section 4 of this catalog.

Installation

1. Drill a 9/16" hole (3/4" for Medium system) in form to allow WaterStop to fit through.
2. After cutting fiberglass Rod to desired length, slip WaterStop onto Rod (wetting WaterStop makes it slide onto Rod easily).
3. Install SuperTie in accordance with published instructions.

Note: If a piece of SuperTie Rod is used (such as with SpreaderClip) as a form-spreading device, WaterStop must also be installed onto the spreader.

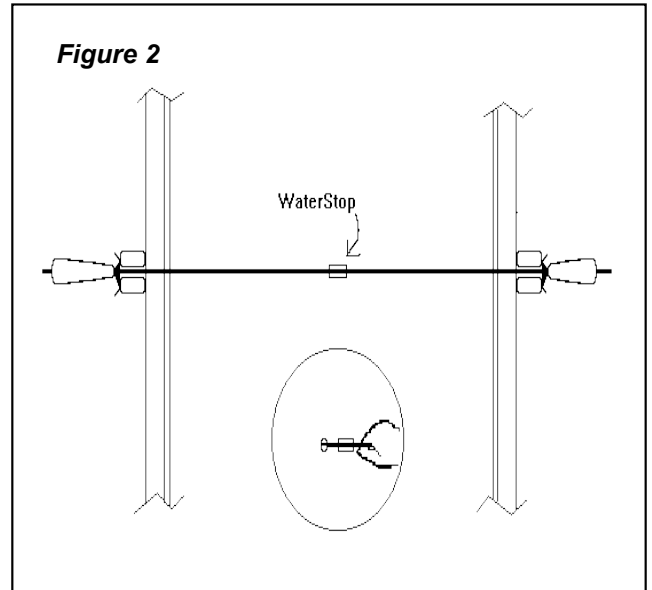

SC/WSIG 11/2014



RJD Industries, LLC

75 Aero Camino, Ste. C, Goleta, CA 93117 (800) 344-4753 Email: Info@rjdindustries.com